



Installation guide for
volatiles lighting panel (2nd generation)
Quick guide

Installation guide

Quick guide



Before you unpack

- Thoroughly inspect the crate from all sides and check for dents, cracks, dirt, stains or other damages including water / moisture marks
- Take several pictures of the crate, if you are unsure
- Report any damage to us as soon as possible (dialog@volatiles.de)


General recommendations and first steps

- We recommend involving 2 people for the installation as the panel can be heavy and bulky.
- Always wear clean gloves with grip.
- Carefully open the crate and check again for any visible damages of the panel (take pictures, if necessary).
- Always lift the panel from the sides and immediately tilt it into a vertical state. Never bend the panel.
- Move the panel with caution, don't trip over, don't apply too much pressure on the panel.

Installation guide

Quick guide

1 Prepare a power supply from the wall

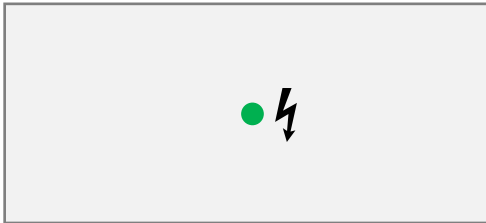

- The panel runs on 230V AC input power (all PSUs are placed inside the panel).
- A power cord (approx. 1 m in length) and a plug are always included.
- Make sure that a power outlet (either through a cable or a socket) is available at the place where the panel will be mounted
- Ideally no cables are visible.

In addition: provide

Ethernet port
(female)



HDMI port
(male)



 
- Optional: provide a Ethernet outlet for better data connection and an HDMI outlet for external video input.

Installation guide

Quick guide



2 Inspect and prepare the wall



- Make sure the wall is dry, flat, clean and dust-free.
- Make sure the wall can support a weight up to 23 kg / sqm
- The depth of the panel amounts to 51 mm.

Please note:


A recessed mounting method is also possible. Please make sure that heat dissipation is ensured from the sides. If this is not possible, please contact customer support for further options.

Installation guide


Quick guide

3 Mount the steel rail on the wall and suspend the panel onto it

Steel rail and spirit level

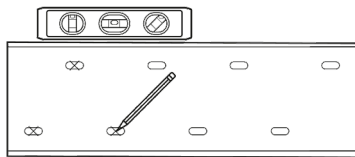

Suspend the panel into the steel rail

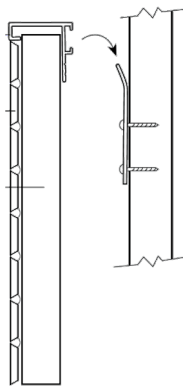

- Screw the steel rail on the wall (suitable screws are not included and depend on the nature of the wall)
- Use a spirit level to achieve a perfectly horizontal position of the steel rail
- Suspend the panel onto the steel rail. The aluminium frame features a notch on all four sides.
- Make sure that you the panel is suspended on the correct side (top and bottom part)
- After connecting the power cords, switch on the main power supply and the panel will automatically start

Installation guide

Quick guide



Handling of open, unprotected electric wires (220 V AC) needs to be carried out by a trained electrician. Please note that improper work can lead to serious bodily harm and damage to the device. It will also lead to a expiration of the warranty.



Customer support:

Phone: +49 (0)30 555 734 46 (Mon - Fri 9 AM to 5 PM)

Email: dialog@volatiles.de